
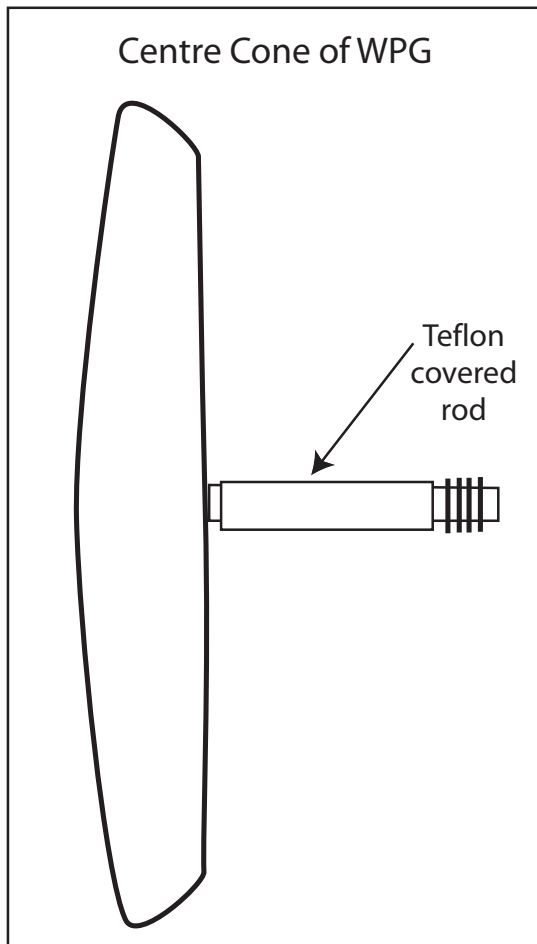


'whisper' POWER Grill Sticking?

In most cases, there's an easy solution to this sticky problem.

The 'whisper' POWER Grill (WPG) is extremely tough; it will open and close reliably thousands of times during its life. Its centre cone's teflon covered rod slides very smoothly and accurately within its precise nose cone guide hole.

However it does not like abrasive dust. Household fluffy and/or oily dust don't cause problems, but any sharp, abrasive construction type of dust or a build-up of nicotine oil will cause it to stick and bind. If this happens, a careful cleaning should be all that's needed.

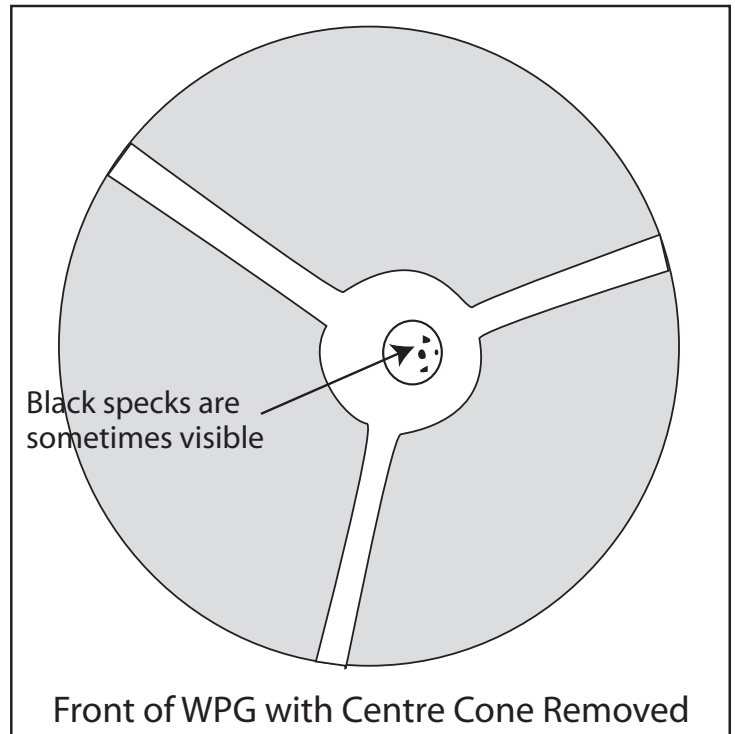

To clean off the black specks:

- Step 1: Set the PoshTime® switch for 28 minutes (usual setting). This will hold the centre cone out where it is easier to grasp and turn.
- Step 2: Unscrew the centre cone (counter clockwise from the face side) approximately 5 or 6 turns until it comes free of the stationary WPG body. Initially it will be tight until it comes free from its set screw; it then turns freely.
- Step 3: Using a clean cotton cloth, twist clean the teflon covered centre rod.
- Step 4: To remove the black specks, wrap a clean cotton cloth around a thin flat screw driver (best) or a chop stick, push it into the 1/4" Ø nose cone hole and twist hard to clean it.
- Step 5: Re-install the centre cone by turning it in 5 to 6 turns until it locks tight to its pre-adjusted internal stop. If it turns in more than 10 turns, there is an internal problem; the rear accessed set screw has been mis-adjusted or has come loose.
- Step 6: Operate the PoshTime® switch and test for proper WPG function. If the centre cone does not travel freely, repeat above. Cleanliness is critical here!

ENEREADY PRODUCTS LTD.

#4 - 6420 Beresford Street • Burnaby • British Columbia CANADA • V5E 1B6
Telephone: 604-433-5697 • Fax: 604-438-8906 • www.enereadyproducts.com

aug.05